


Tandberg Remote Control 9

Introduction.

The Tandberg Remote Control Unit 9 is designed for use with the following tape decks: 9000X, 9100X, 9200X, 10X, 10XD and TCD 330.

The Remote Control Unit may be used in connection with an automatic timer to start the tape deck for recording or playback at any time, only limited by the automatic timer setting time. See next page.


Connections.

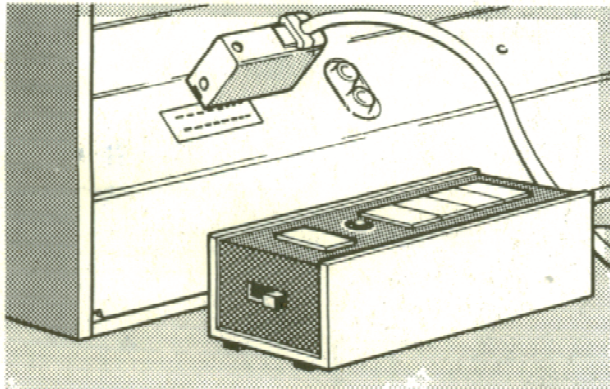

Connect the Remote Control Unit plug to the REMOTE CONTROL socket on the connector strip at the rear side of the tape deck.

NOTE! When the Remote Control is connected, and the TIMED START is switched to OFF, it is still possible to operate the main function buttons on the tape deck.

Recording.(without automatic timer).

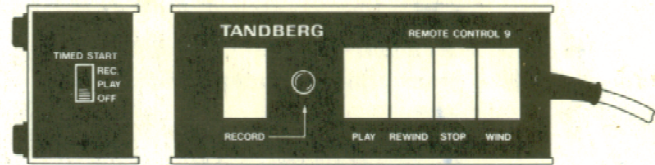

Make sure that the TIMED START slide switch on the Remote Control is switched to OFF. Using normal recording procedure, begin the recording by depressing the STOP-button. Push then simultaneously the two RECORD-touch-buttons on the Remote Control. It is not necessary to hold the buttons down.

Playback (without automatic timer).

Make sure that the TIMED START on the Remote Control is switched to OFF. Prepare for playback in the usual manner and begin the operation by depressing the PLAY touch-button on the Remote Control.

Wind and Rewind.

Wind: Depress the WIND touch-button.
Rewind: Depress the REWIND touch-button.

Using the automatic timer. Playback.



NOTE! The automatic timer can only be used together with the Remote Control Unit 9.

Recording.




Connect the automatic timer to the mains and the tape deck main plug to the automatic timer, as shown in Figure.

Select the starting and switching off time, but allow a few minutes extra to avoid losing the beginning or the end of the program. Then follow the usual procedure for recording without depressing the RECORD touch-button.

The Remote Control Unit must remain connected to the tape deck and the slide switch TIMED START must be set to the RECORD position.

Connect the automatic timer and select the desired start and stop time as described for the recording function. Then follow the usual procedure for playback without depressing the PLAY touch-button.

The Remote Control Unit must be connected to the tape deck and the slide switch TIMED START must be set in PLAY position.

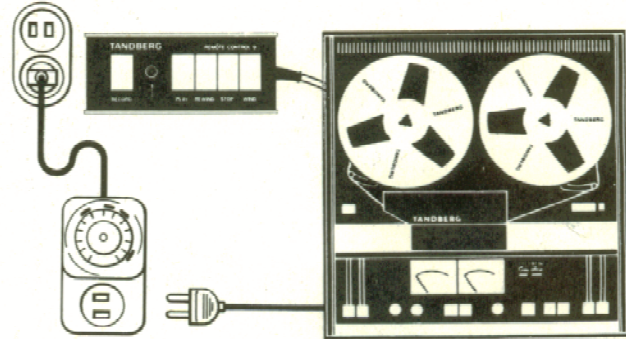

NOTE! When the tape deck are not going to be started or stopped with the automatic timer, the slide switch TIMED START on the Remote Control Unit shall always be in the position OFF.