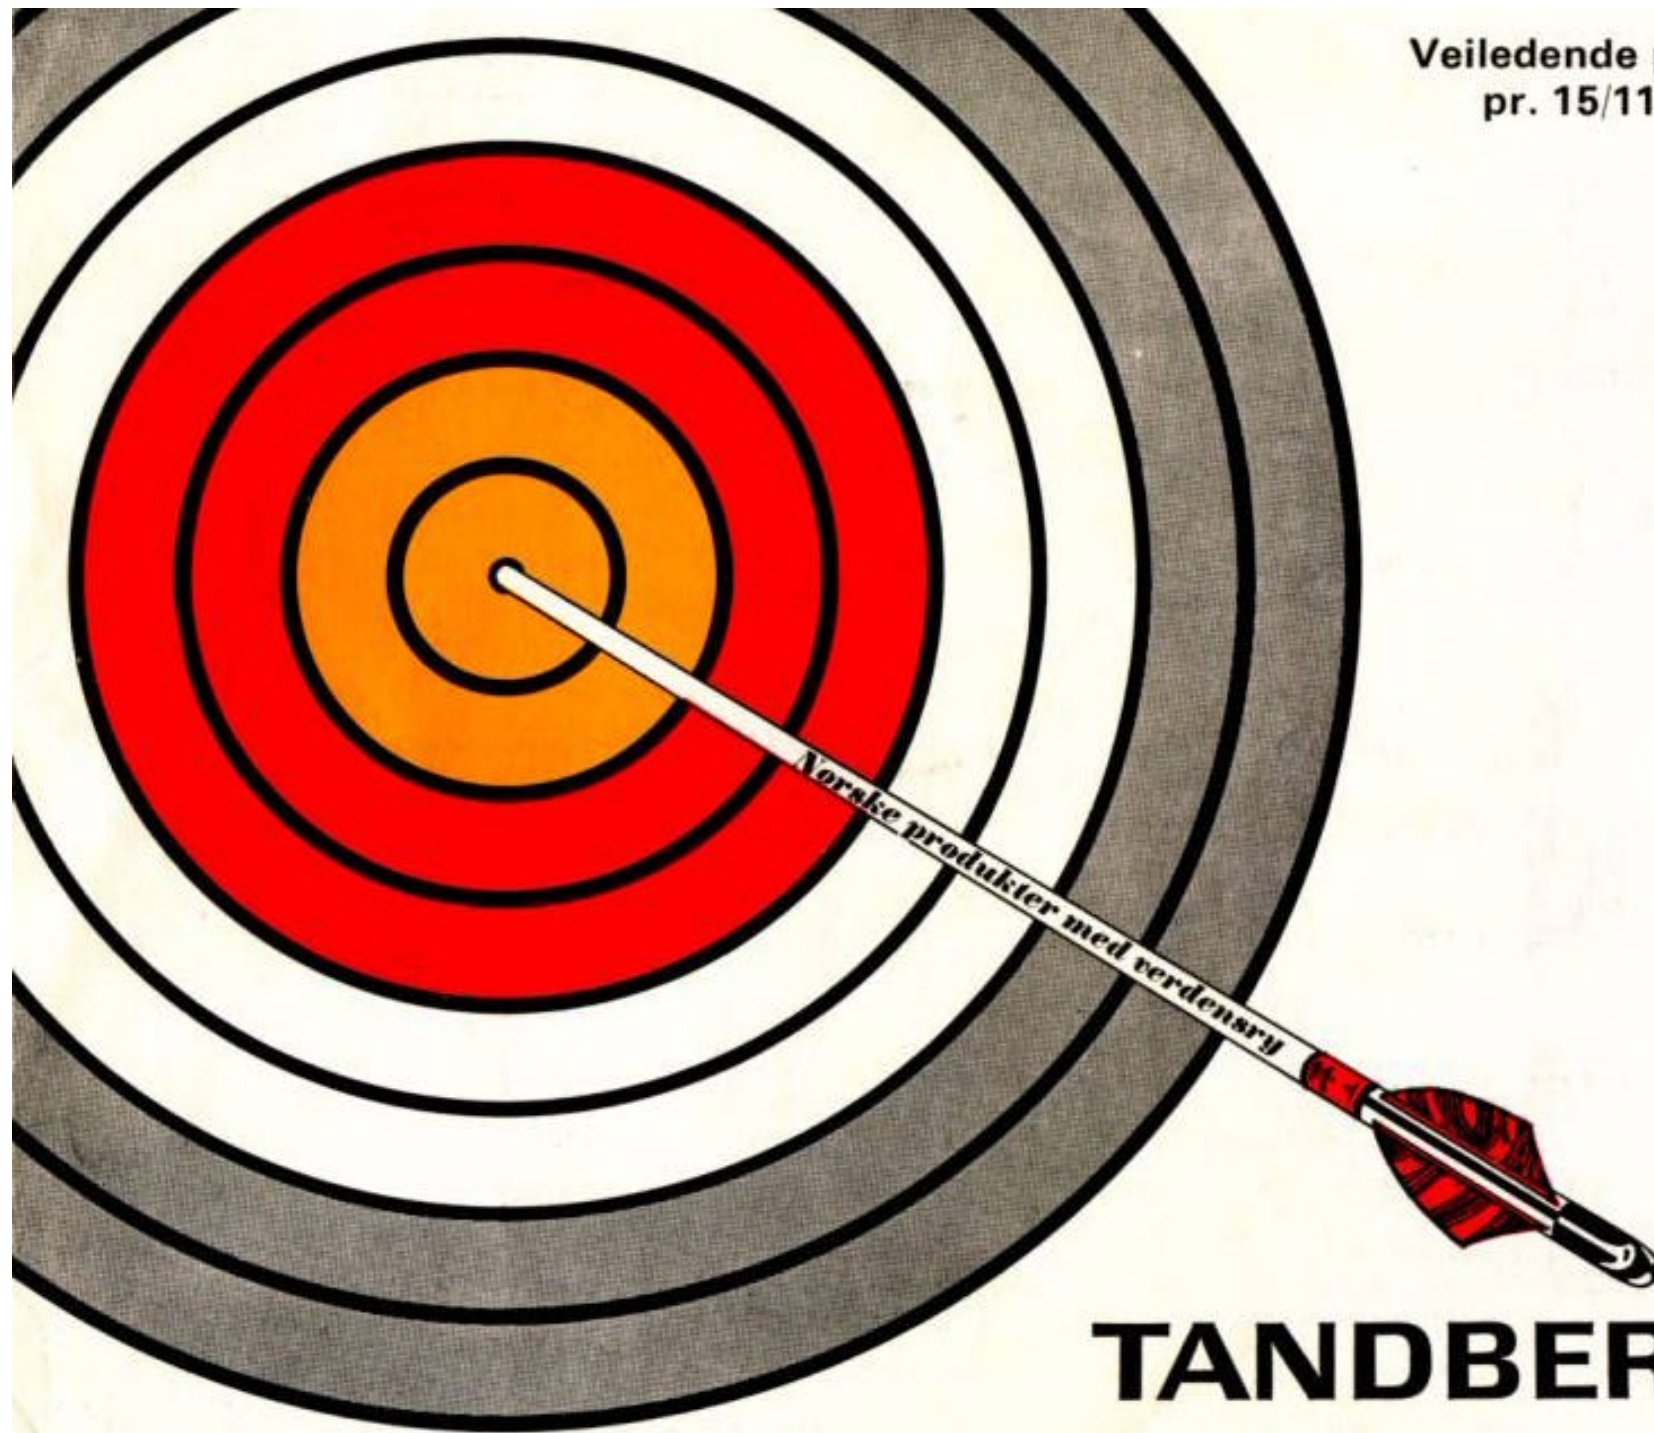 


 

 
 



Veiledende priser
pr. 15/11-1971



TANDBERG









TANDBERG TV

Utstyr:








				Teak	Palisander					
						Teak	Palisander			
	TANDBERG TV-84	m/UHF	2.345,—	2.445,—	Bord med trinser: TV-84 130,— 160,—				
		u/UHF	2.245,—	2.345,—					
	TANDBERG TV-85	m/UHF	2.495,—	2.595,—	Bord med trinser: TV-85 130,— 160,—				
		u/UHF	2.345,—	2.445,—					
	TANDBERG TV-86	m/UHF	2.595,—	2.695,—	Bord med trinser: TV-86 130,— 160,—				
		u/UHF	2.445,—	2.545,—					
	TANDBERG TV-87	m/UHF	2.745,—	2.845,—	Bord med trinser: TV-87 130,— 160,—				
		u/UHF	2.645,—	2.745,—					
	TANDBERG TV-88	m/UHF	2.945,—	3.095,—	Bord: TV-88 120,— 147,—				
		u/UHF	2.845,—	2.995,—					
	TANDBERG TV-89	m/UHF	3.195,—	3.345,—	Bord: TV-89 120,— 147,—				
		u/UHF	3.095,—	3.245,—					
	TANDBERG COLOR TV-90		6.395,—	6.395,—	Bord: Color TV .. 150,— 150,—				
	TANDBERG COLOR TV-91		6.845,—	6.845,—					
	TANDBERG COLOR TV-92		7.145,—	7.145,—					
						1 sett trinser	32,—		

TANDBERG BÄNDOPPTAKER

Utstyr:

	Teak	Palisander	Koffertmod.
	Modell 1721 (2 spor)	1.045,—	1.075,—
	Modell 1741 (4 spor)	1.095,—	1.125,—
	Modell 1421 (2 spor)	1.295,—	1.295,—
	Modell 1441 (4 spor)	1.345,—	1.345,—
	Modell 1422 (2 spor)		1.395,—
	Modell 1442 (4 spor)		1.445,—
	Modell 1521 (2 spor)	1.395,—	1.395,—
	Modell 1541 (4 spor)	1.450,—	1.450,—
	Modell 1521-F (2 spor, F-utstyr)	1.940,—	
	Modell 1521-SL (2 spor) ..	1.760,—	
	Modell 1541-F (4 spor, F-utstyr)	1.995,—	
	Modell 1522 (2 spor)		1.495,—
	Modell 1522-SL (2 spor)		1.860,—
	Modell 1542 (4 spor)		1.550,—
	Modell 1821 Stereo (2 spor)	1.295,—	1.295,—
	Modell 1841 Stereo (4 spor)	1.295,—	1.295,—
	Modell 3021X Stereo (2 spor)	1.795,—	1.795,—
	Modell 3041X Stereo (4 spor)	1.795,—	1.795,—
	Modell 4021X Stereo (2 spor)	2.645,—	2.645,—
	Modell 4041X Stereo (4 spor)	2.645,—	2.645,—
	Modell 6021X Stereo (2 spor)	2.695,—	2.695,—
	Modell 6041X Stereo (4 spor)	2.695,—	2.695,—
	Modell 11-1 (1 spor)	2.895,—	
	Modell 11-2 (2 spor)	2.895,—	
	Modell 11-1P (1 spor) Pilot tone	3.895,—	
	Mikr. TM4 Complete ..	185,—	
	Mikrofon TM4 Handy	120,—	
	Mikrofon TM5	495,—	
	Mikrofon TM6	195,—	
	Mikrofon TM3	120,—	
	Mikrofon stativ TM5 ..	95,—	
	Skjøtekabel TM5	55,—	
	Mikrofontrafo	85,—	
	Mikrofon Mikser	225,—	
	Hodetelefon HD414 ..	198,—	
	Hodetelf. m/mikr. B1	365,—	
	Hodetelf. m/mikr. F1	165,—	
	Stetoset øretelefon ..	70,—	
	Plastdeksel	35,—	
	Koffert nr. 4, 5 og 6 ..	165,—	
	Bag	125,—	
	Bildesynkr. Modell 3 ..	365,—	
	Pedal	155,—	
	Hodetelefon K50	169,—	
	Lydbånd		
	1800 ft.	46,75	
	1200 ft.	33,15	
	600 ft.	20,40	
	300 ft.	14,50	
	200 ft.	9,50	
	Lydbånd, Low Noise		
	1800 ft.	55,—	
	1200 ft.	39,—	
	900 ft.	34,50	
	Skjøtebånd	4,20	
	Tomspole 7"	5,15	
	Tomspole 5"	3,55	
	Tomspole 3"	1,85	
	Veske for Modell 11 ..	155,—	
	Batterieliminatør 4 for		
	Modell 11	395,—	
	Adaptør 2 for Modell 11	445,—	

TANDBERG RADIO

	Teak	Palisander	Eik	
Tandberg Radio Modell 42	985,—			
				
Sølvsuper 11-71	1.695,—	1.695,—	1.695,—	
				
Sølvsuper 11-72	1.895,—	1.895,—		
Stereodecoder				165,—
				
Tuner-Amplifier Hi-Fi FM	1.395,—	1.395,—		
Stereodecoder				165,—
				
FM Stereo Receiver TR-200	1.695,—	1.695,—	1.695,—	
Stereodecoder				165,—
				
TR-200 Compact	2.195,—	2.195,—		
Stereodecoder				165,—
TANDBERG HI-FI HØYTTALERE				
Hi-Fi 10	235,—			
Hi-Fi 11	265,—	295,—		
Hi-Fi 12	325,—	355,—	325,—	
Hi-Fi 18	325,—	350,—	325,—	
Hi-Fi 19	350,—	375,—	350,—	
Hi-Fi 20	375,—	410,—		
Hi-Fi 7	425,—	480,—		
Hi-Fi 13	425,—	480,—		
Hi-Fi 17	725,—	780,—		
Hi-Fi 15	825,—	895,—		
TL 1210	395,—	440,—	395,—	
TL 2510	590,—	660,—	590,—	
TL 5010	1.240,—	1.360,—	1.240,—	
SEPARATHØYTTALERE				
			Teak	
Separathøytaler 9	225,—			
Kjøkkenhøytaler 16	125,—			
TANDBERG REISERADIO				
				
Tandberg Portable 41	Nøttetre			895,—
UTSTYR REISERADIO				
Veske				50,—
Batterieliminatør 3 for Modell 3-3				90,—
Batterieliminatør 5 for Modell 41				105,—
Monteringsramme for Modell 3-3				42,25
Monteringsramme for Modell 41				49,—
Monteringskassett for Modell 41				110,—
Monteringskassett for 6 og 12V (TP3)				153,—
Monteringskassett, 12V Spesial (TP3)				90,—
Lås for monteringskassett (TP3)				15,80
PLATESPILLERE				
Platespiller SP25 Mk III m/keramisk pick-up	430,—			
Platespiller SP25 Mk III m/magnetisk p.-up	530,—			
Platespiller TD-150 AB Mk II m/magn. p.-up	933,—			
Plastdeksel for SP25	26,50			
Plastdeksel for TD-150	74,—			
Handler:				
Sørumsand TV-Center Als				
RADIO-ELEKTRISK				
- Sørumsand				
Telefon 72 70 30				